

DEAR PARENTS

Congratulations on your purchase of the Maxi-Cosi Mura.

Safety, user-friendliness, comfort and design played an important role in developing this pushchair. Your Maxi-Cosi Mura therefore complies with the strictest standards and will provide you with a high level of user-friendliness and comfort.

Read this instruction manual carefully. You will then be able to make full use of your pushchair. Moreover, the safety and comfort of you and your child can only be guaranteed if the product is used correctly.

We hope that you will find your Maxi-Cosi Mura easy to use and that it will give you years of pleasure!

Dorel

CONTENTS

- 1 **IMPORTANT: READ FIRST!**
- 2 **SAFETY INSTRUCTIONS**
- 3 **PRODUCT DESCRIPTION**
- 4 **PREPARING THE MAXI-COSI MURA FOR USE / UNFOLDING AND FOLDING / DISASSEMBLING**
 - 4.1 Preparing the pushchair for use
 - 4.2 Folding and disassembling
- 5 **PLACING YOUR CHILD IN THE MAXI-COSI MURA**
 - 5.1 General
 - 5.2 Adjusting the length of the belt
 - 5.3 Adjusting the height of the shoulder belt
- 6 **CLEANING AND MAINTENANCE**
 - 6.1 General
 - 6.2 Maintenance of the Maxi-Cosi Mura
 - 6.3 Maintenance of the Maxi-Cosi Mura tyres
- 7 **SEPARATING WASTE**
- 8 **WARRANTY**
- 9 **QUESTIONS**

Disclaimer:

The utmost care was exercised in designing and compiling this instruction manual. We cannot, however, offer any guarantees with regard to the completeness and correctness of the information contained herein.

1 IMPORTANT: READ FIRST!

- **WARNING**
Please read this instruction manual carefully and keep it for future reference. The safety of the child may be seriously endangered if the instructions are not followed.
- **WARNING**
You are personally responsible for the safety of your child.
- **WARNING**
It can be dangerous to leave your child unsupervised.
- **WARNING**
Always set the parking brake on the pushchair when you are standing still.
- **WARNING**
Always secure your child with the safety harness as soon as your child can sit up unassisted.
- **WARNING**
Always secure your child with the safety harness - and as tight as possible!
- **WARNING**
Do not hang anything from the handlebar. This will make the pushchair less stable and will increase the risk of tipping over.
- **WARNING**
Keep all small parts like the tyre valve caps away from children. Your child may swallow them and they pose a choking hazard. Also keep the hand pump out of the reach of children.
- **WARNING**
Prevent the danger of suffocation and keep plastic bags out of the reach of children.
- **WARNING**
This product is not suitable for jogging or skating behind.
- **WARNING**
Check to make sure that all locks are secured before each use in order to avoid getting anything jammed between parts.
- **WARNING**
Before each use check that the prambody, adapters and/or seats are installed correctly and securely locked.
- **WARNING**
The black tyres may leave marks on some smooth floors (particularly synthetic laminates, parquet and linoleum).

2 SAFETY INSTRUCTIONS

- Use the Maxi-Cosi Mura for only one child at a time.
- The Maxi-Cosi Mura is suitable for children from birth to age 4 (maximum of 20 kg).
- We recommend that the seat of the Maxi-Cosi Mura is only used after your child has reached the age of 6 months and is able to sit unassisted. When being used from birth, we recommend that the Maxi-Cosi Mura is used together with a carrycot, prambody or Maxi-Cosi baby or child car seat.
- **The Maxi-Cosi Mura seat is not suitable for use in a car.** Use a Maxi-Cosi baby or child car seat for this.
- Keep your child and your fingers/hands away from moving/folding parts when folding or unfolding or adjusting the Maxi-Cosi Mura.
- Never lift the Maxi-Cosi Mura or use escalators or stairs when your child is sitting or lying in the pushchair.
- Check and clean your Maxi-Cosi Mura regularly.
- Do not remove the logos from the fabric cover. This will avoid damage to the fabric cover.
- Prevent the danger of suffocation and keep plastic bags out of the reach of children.
- Only use original accessories and parts that have been approved by the manufacturer. Do not make any modifications to the product. Contact your supplier or importer if you have any complaints or problems.

Maxi-Cosi Mura has been approved in accordance with EN 1888:2003 (amendments 1, 2 & 3).

Type of pushchair	Body weight of child	Age
Pushchair with carrycot	max. 9 kg	From birth to approx. 5 months
Pushchair with prambody	max. 9 kg	From birth to approx. 6 months
Pushchair with a Maxi-Cosi baby car seat	max. 13 kg	From birth to approx. 12 months

3 PRODUCT DESCRIPTION



- | | |
|----------------------------------|----------------------------------|
| 1. Handlebar adjustment button | 14. Front fork release button |
| 2. Handlebar | 15. Front wheel |
| 3. Seat | 16. Basket |
| 4. Comfort cushion | 17. Rear wheel |
| 5. Safety harness | 18. Transport hook |
| 6. Belt pad | 19. Pump |
| 7. T-bar aperture protective cap | 20. Fold release buttons |
| 8. T-bar | 21. Fold safety lock |
| 9. T-bar release button | 22. Sun canopy |
| 10. Frame | 23. Back rest positioning handle |
| 11. Leg rest adjustment button | 24. Seat release button |
| 12. Leg rest | 25. Sub-frame release button |
| 13. Swivel wheel lock | 26. Brake |
| | 27. Adapters |

Accessories:

Maxi-Cosi baby car seat
Prambody
Carrycot
Foot muff
Shopping bag
Parasol and parasol clamp
Rain cover

4 PREPARING THE MAXI-COSI MURA FOR USE / UNFOLDING AND FOLDING / DISASSEMBLING

Please note: the left and right sides are as seen from the handlebar/back

4.1 Preparing the pushchair for use

Fitting the wheels

1. Press on the centre of the hubcap and insert the axle of the rear wheels into the frame until you hear it 'click' (Fig. 1).
2. Insert the front wheels into the front fork until you hear them 'click' (Fig. 2).
3. Check that the wheels are correctly secured.

Unfolding the frame

1. Place the frame upright.
2. Push the transport hook near the right rear leg aside (Fig. 3).
3. Pull the handlebar toward you and then upward (Fig. 3). The frame will unfold and the handlebar will click into the locking device (Fig. 4).

Adjusting the handlebar height

- Press the adjustment button and slide the handlebar to the desired height. With a 'click' the handlebar is fixed in position (Fig. 5).

Parking brake

- **Note:** always use the parking brake, even when standing still for only a few moments!
1. Press the red surface of the pedal down to set the parking brake on your Maxi-Cosi Mura (Fig. 6).
 2. Put your foot under the pedal and press it up to release the parking brake on the Maxi-Cosi Mura.

Adapters

The adapters are marked on the inside with an A (right) and B (left).

1. Slide the adapters onto the frame until you hear a 'click' (Fig. 7).
2. Check that both adapters are secure.
3. When using the prambody: fold the hinging parts of the adapters down (Fig. 8). For further use see the instructions for the prambody.
4. When using a Maxi-Cosi baby car seat: fold the hinging parts of the adapters up (Fig. 9). For further instructions see the Maxi-Cosi baby car seat instruction manual.
5. Remove the adapters by pushing the lip inward (toward the middle of the pushchair). Then slide the adapters off the frame (Fig. 10).

Seat

- **Note:** The Maxi-Cosi Mura is suitable for children from birth to age 4 (maximum of 20 kg). We recommend that the seat of the Maxi-Cosi Mura is only used after your child has reached the age of 6 months and is able to sit unassisted. Always secure your child with the safety harness. **The Maxi-Cosi Mura seat is not suitable for use in a car.**

Preparing the seat for use

1. Fold up the leg rest and attach the fabric cover (Fig. 11).
2. Press the buttons on both sides to fold down the leg rest. The seat can be used in two positions.
 - **Note:** never allow your child to stand or sit on the footrest.
3. Put the back rest in the upright position using the positioning handle (Fig. 12).
 - **Note:** never hang bags or other products behind or on the positioning handle and never clamp objects between the back rest and the handle.
4. Remove the protective cap from the crotch strap by pulling the click tab forward and then pushing it upward (Fig. 13). Push the T-bar into the seat until you hear it click.
5. Attach the elastic to the bottom (Fig. 14).

To remove: loosen the elastic on the bottom. Push in the button on the front and pull the T-bar upward. Replace the protective cap.

Fitting the seat and adjusting the sitting angle

- **Note:** the seat can only be fitted when the adapters have been removed.
1. Place the seat on the frame with a 'click'. (Fig. 15).
 2. Check to make sure everything is secure.
 3. Pull the back rest positioning handle up and tilt the back rest into the required position (Fig. 16). The seat can be adjusted to 3 positions: a sitting position, a semi-reclining position and a reclining position.

Turning the seat around

1. Pull the release handle on the Maxi-Cosi Mura seat backwards and remove the seat (Fig. 17).
 - **Note:** do not lift the Maxi-Cosi Mura up with the T-bar.
2. Turn the seat around and place it in the frame until it 'clicks' (Fig. 18).
3. Check to make sure everything is secure. There are D-rings for attaching an additional safety harness. The standard for this type of harness is BS 6684.

Locking the swivel wheels

1. Slide the swivel locks on the front wheels down and turn the front wheels to the rear position until you hear a 'click' (Fig. 19).
2. To release the lock lift up the swivel lock.

Sun canopy

When using the Maxi-Cosi Mura with the seat in the forward-facing position:

1. Attaching: slide the sun canopy onto the frame until it can go no further (Fig. 20). When using the Maxi-Cosi Mura in the semi-reclining and reclining positions you can use an extra flap on the sun canopy. Remove the flap from its storage compartment (Fig. 21), close the canopy using the zips and pull the flap tight using the stopper (Fig. 22).
2. When using the Maxi-Cosi Mura seat in the semi-reclining and reclining positions secure the sun canopy using the buttonhole. In addition, secure the sun canopy using the snaps on the side of the seat (Fig. 23).
3. Removing: loosen the sun canopy using the buttonhole and snaps (Fig. 24). Slide the sun canopy to the top of the frame (Fig. 25).
 - **Note:** when turning the seat around you have to turn the sun canopy around also.

When using the Maxi-Cosi Mura with the seat in the backward-facing position, the sun canopy should be secured using only the press studs and not using the buttonhole (Fig. 26).

Basket

1. The basket can be used for shopping up to a maximum of 8 kg (Fig. 27).
2. You can attach and remove the basket using the press studs, hooks and elastics (on the bottom of the Maxi-Cosi Mura).
 - **Note:** do not exceed the maximum permitted weight of 8 kg!

4.2 Folding and disassembling

Folding

1. If you want to fold the Maxi-Cosi Mura with the seat still attached, this is only possible when the seat is attached in the forward-facing position and the back rest is in the extreme forward position (Fig. 28).
 - We recommend that the seat is always removed before starting to fold the pushchair.
2. Fold back the sun canopy parallel to the handlebar (Fig. 29).

3. Turn the fold safety lock on the right side downwards and then simultaneously pull the folding-up release buttons on both sides upwards (Fig. 30).
4. Tilt the handlebar forwards and then down until it 'clicks' into the transport lock (Fig. 31).

If you want to fold the frame even smaller:

5. Remove the seat before starting folding.
6. Turn the front wheels forward.
7. Press the release button (Fig. 32).
8. The frame folds even smaller.
9. Remove the wheels if necessary.

Removing the wheels

1. Rear wheels: press on the centre of the hubcap and at the same time pull the rear wheels out of the frame (Fig. 33).
2. Front wheels: press in the release buttons on both sides and pull the front wheels out of the front fork (Fig. 34).

5 PLACING YOUR CHILD IN THE MAXI-COSI MURA

5.1 General

- **Note:** always set the brake on the Maxi-Cosi Mura before placing your child in the seat. Ensure that the safety harness is open.
1. Slide the buckle sections together and click them into the buckle. The lap belt and the shoulder belts are fastened to the crotch strap (Fig. 35).

5.2 Adjusting the length of the belt

1. Unfasten the Velcro on the Comfort cushion from the back rest. Unfasten the shoulder belt hook and remove the belt pad (Fig. 36).
2. Adjust the belt length to the size of your child by lengthening or shortening the clasp (Fig. 37).
3. Place the belt pads over the shoulder belts again. Attach the hooks to the loop. Slide the belt pad up over the shoulder belt and attach it using the press-stud (Fig. 38).
4. Push both buttons to open the belt buckle (Fig. 39).

5.3 Adjusting the height of the shoulder belt

1. Unfasten the shoulder belt hook and remove the belt pad (Fig. 40).
2. Pull the shoulder belt out of the loop and thread it through the other loop (Fig. 41).
3. Adjust the belt length to the size of your child by lengthening or shortening the clasp (Fig. 42).
4. Place the belt pads over the shoulder belts again. Attach the hooks to the loop. Slide the belt pad up over the shoulder belt and attach it using the press-stud (Fig. 43).

6 CLEANING AND MAINTENANCE

Warning:

- Check regularly to make sure that the Maxi-Cosi Mura functions properly. This is essential for your child's safety.
- For reasons of safety, always use original parts.
- In the event of damage have your retailer check and/or repair your Maxi-Cosi Mura before using it again.
- When cleaning never use silicon lubricants. These attract dirt and grime.
- Clean the frame, the fabric cover and the basket regularly using a damp cloth. Do not use abrasive cleaners.

6.1 General

- During rain always use the rain cover to protect the fabric cover. After use, dry the pushchair with a soft, absorbent cloth.
- Remove the detachable wheels once a month, clean the axles and lubricate them with a dry Teflon spray.
- Never use the Maxi-Cosi Mura in seawater. After use on the beach, clean the frame and wheels thoroughly with water to prevent rusting.

6.2 Cleaning the Maxi-Cosi Mura Comfort cushion

1. Remove the Maxi-Cosi Mura seat from the frame.
2. Remove the T-bar.
3. Unfasten the shoulder belt hook and remove the belt pads.
4. Loosen the fabric cover on the footrest (Fig. 44).
5. Slide the tabs on the bottom of the cushion outwards (Fig. 45). The Comfort cushion will now be free of the seat.
6. Remove the belt pad from the crotch strap by loosening the snap.
7. Loosen all loops on the bottom of the seat (Fig. 46).
8. Remove the fabric cover from the Comfort cushion. Start on one side and continue on the other side (Fig. 47).
 - **Note!** Remove the fabric cover around the T-bar aperture last (Fig. 48)!
9. Finally, pull the safety harness fully out of the Comfort cushion.

The fabric cover can be attached in the reverse order.

- **Note!** *The tabs on the bottom should be clicked back in again. Check that the Comfort cushion is securely attached to the seat.*

6.3 Maintenance of the Maxi-Cosi Mura tyres

- Make sure that the pressure in all the tyres is correct and the same. The correct tyre pressure is stated on the tyre. Properly pumped up tyres will ensure a lighter and more smoother ride from the Maxi-Cosi Mura and will prevent damage to rotating and hinging parts.
- The tyres are fitted with a car tyre valve. They can be inflated using the hand pump supplied (to be found in the front compartment of the basket) or at a garage or petrol station. The tyres can be inflated more easily once the wheels have been removed from the frame.
- A punctured inner tube can be repaired in the same way as a bicycle tyre. You can buy separate inner tubes from your supplier.
- Always deflate the tyres before taking the Maxi-Cosi Mura onto an aircraft, as the air pressure difference could cause the tyres to burst.

7 SEPARATING WASTE

For environmental reasons, we request that you separate the packaging waste from the Maxi-Cosi Mura. In addition, waste at the end of the service life of the Maxi-Cosi Mura (product parts) should be separated.

Warning:

Keep plastic wrapping material out of reach of your child in order to avoid the risk of suffocation.

Packaging	
Cardboard box	Paper waste
Plastic bag	Residual waste
Product parts	
Fabric cover	Residual waste
Plastic parts	In the appropriate container
Metal parts	Container for metal
Pneumatic tyres	Residual waste
Tether	Container for polyester

8 WARRANTY

Dorel guarantees that this product complies with the safety requirements as specified in current European safety standards, and that this product is free from defects in workmanship and material at the time of purchase. You should contact your retailer if this product shows material and/or manufacturing faults (with normal use as described in the user instructions) after purchase and during the warranty period. The warranty period is 24 months for plastic and metal parts and 12 months for other parts susceptible to wear and tear, such as the fabric cover. This does not, of course, include the normal wear that may be expected with the daily use of a product.

The guarantee is not valid in the following cases:

- If the product is not submitted for repair through a recognized Dorel supplier.
- If the product is not supplied to the manufacturer with the original purchase receipt (via the retailer and/or importer).
- If repairs were carried out by third parties.
- If the barcode sticker is damaged or has been removed.
- If the defect is the result of improper or careless use or maintenance, negligence or impact damage to the fabric cover and frame.
- If the defect is the result of an accident or airplane travel.
- If the defect is the result of overloading (exceeding the maximum weight allowed for your child and/or packages).
- If the defect is the result of carrying two children and the use of a standing board or seats.
- If the parts show normal wear and tear that may be expected from daily use.
- If there is normal wear and tear to the wheels, tyres and/or fabric cover (such as a flat tyre and/or loose press studs).
- If there is discolouration on the fabric cover or water marks due to washing, rainwater, or excessive exposure to sunlight (UV).
- If damage to the fabric cover was caused by, amongst others, clothing, zippers or press studs.
- If the product has been involved in a collision with a pavement kerb or heavy shop door, for example. This could cause the wheels and/or axles to be thrown out of alignment or bend as a result of which the pushchair will no longer track correctly.
- If there is damage to surfaces, such as synthetic laminate floors, due to tyre marks.
- If the stated warranty terms and conditions have not been satisfied.

Effective date:

The warranty becomes effective on the date the product is purchased.

Warranty period:

The warranty on the plastic parts and metal parts is valid for a period of 24 consecutive months. For other parts that are subject to wear and tear, the warranty period is valid for 12 consecutive months. The warranty only applies to the first owner and is not transferable.

What to do in case of defects:

In the event of problems or defects, contact your retailer. If the fault cannot be rectified, the retailer will send the product, together with a description of the complaint and the original receipt, back to the manufacturer. Exchanging or taking back the product cannot be requested. Repairs do not give entitlement to extension of the warranty. Products that are returned directly to the manufacturer are NOT eligible for warranty.

General:

Fabric components and other parts subject to wear and tear:

- The fabric should be cleaned on a regular basis (follow the maintenance instructions).
- It is normal for the fabric cover to show a certain degree of wear and tear or discolouration due to sunlight after some time.

This Warranty Clause conforms to European Directive 99/44/EC of 25 May 1999.

9 QUESTIONS

If you have any questions, please contact your supplier or importer (see the back of the instruction manual). Make sure that you have the following information to hand:

- Serial number from the sticker on the bottom of the frame.
- Age, height and weight of your child.

